




OPTIMIZ-R Drawer (89/121/185mm Height)

Components

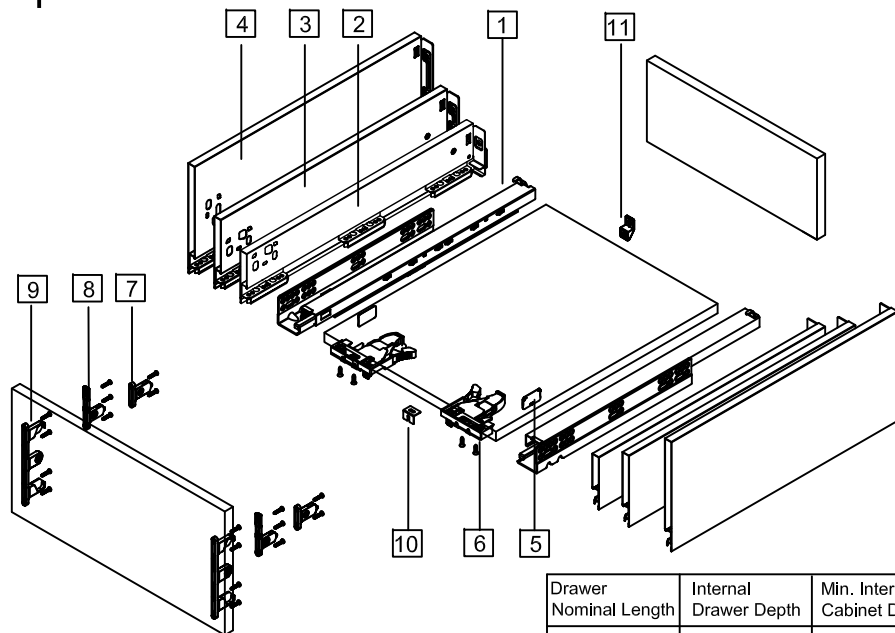


1. Series 828 slides	7. Front fixing-brackets (89 height)
2. 89 height drawer sides	8. Front fixing-brackets (121 height)
3. 121 height drawer sides	9. Front fixing-brackets (185 height)
4. 185 height drawer sides	10. Bottom fixing - front *
5. Side cover cap	11. Bottom fixing - back *
6. 4-way locking devices	(* Optional for wide drawers)

Drawer Nominal Length	Internal Drawer Depth	Min. Internal Cabinet Depth
270mm	254mm	285mm
300mm	274mm	305mm
350mm	324mm	355mm
400mm	374mm	405mm
450mm	424mm	455mm
500mm	474mm	505mm
550mm	524mm	555mm
600mm	574mm	605mm
650mm	624mm	655mm


Drawer Back & Drawer Bottom Dimensions - 16mm panel

Drawer Back (Pre-drilling not necessary)

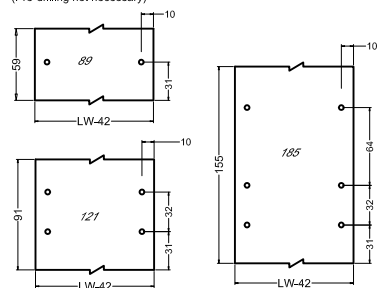


Drawer Model	89	121	185
Back Height (mm)	59	91	155

Drawer Bottom (Pre-drilling not necessary)

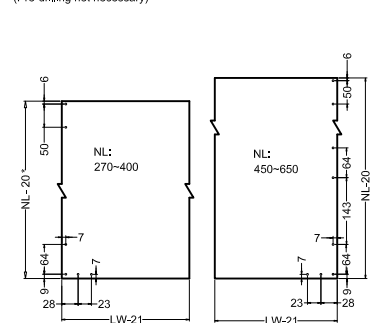

* NL: Nominal Length
For NL of 270, drawer bottom length = 260mm.

LW Internal cabinet width

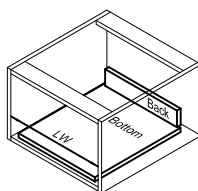


Installation Dimensions (mm)

Nominal slide length=NL

Internal cabinet depth=LT

LW=Internal cabinet width

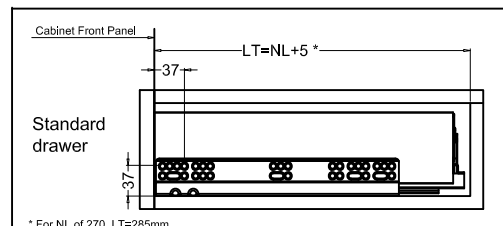


* For NL of 270, LT=285mm.


Drawer Front Drilling (mm)

Ø2 x 12	Ø10 x 12
Wood screw	Dowel or expanding dowel
Ø4 x 17	Ø10 dowel or expanding dowel


Height 89

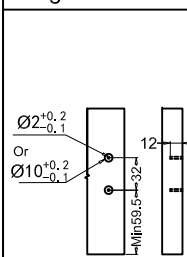


Height 121

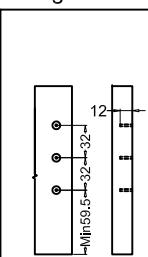


Height 185

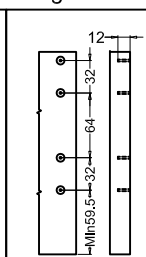

Slides Hole Pattern

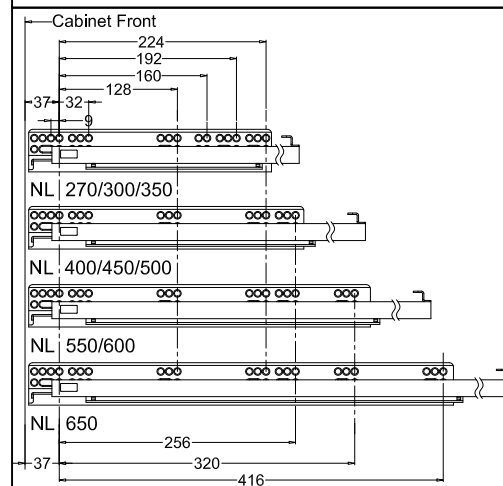


Height 89

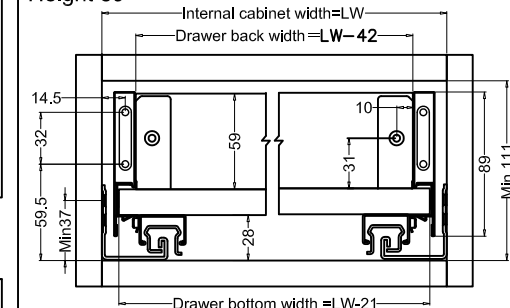


Drawer front drilling from edge: 14,5mm + Overlay

Height 121

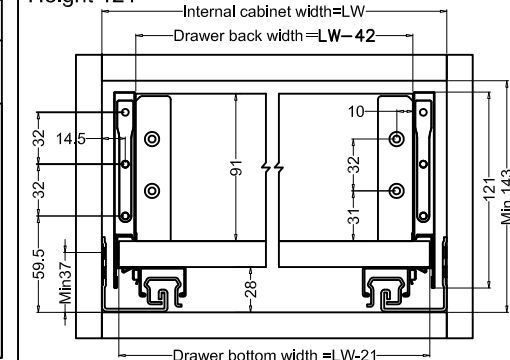

Drawer front drilling from edge: 14,5mm + Overlay


Height 185

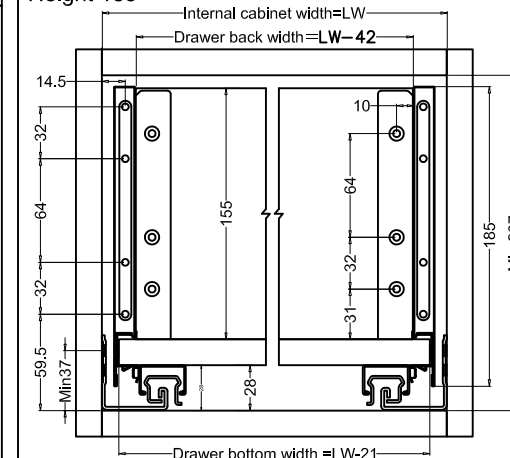


Drawer front drilling from edge: 14,5mm + Overlay

Metal Box Drawer


Drawer Front Adjustments

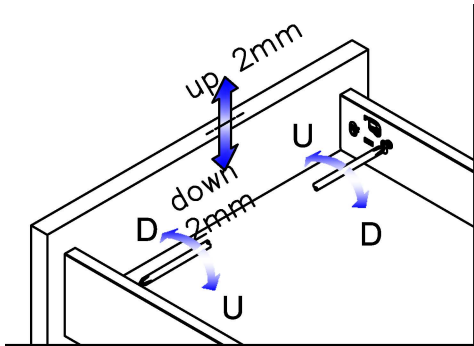

Up / down adjustment

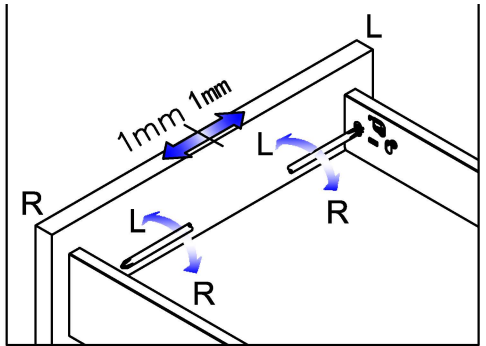


Left / right adjustment

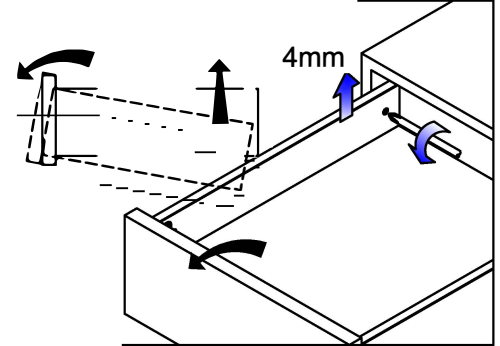


Tilting adjustment


Disassembly

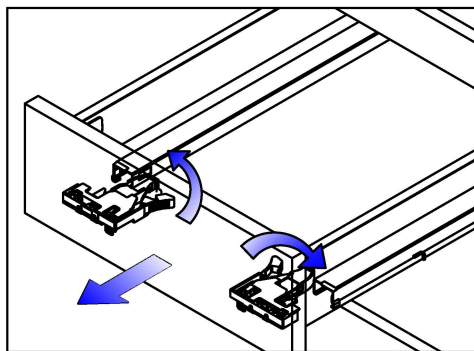

Remove drawer

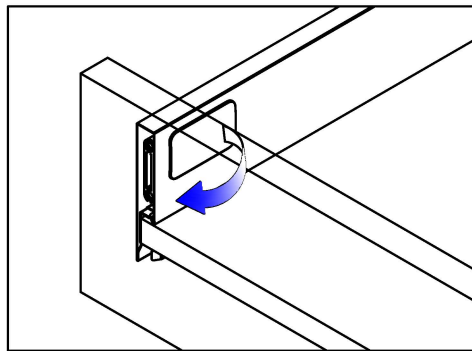

Tip up cover cap

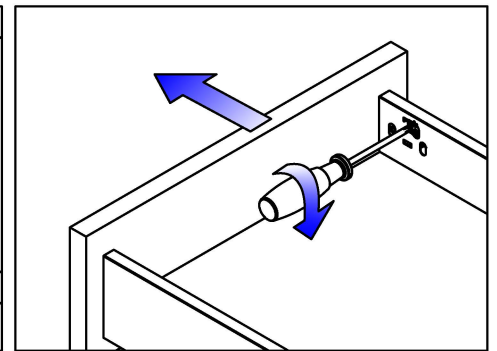

Release drawer front